

DT06-10C1 9.6" Liquid Crystal Display TV

This guide is designed as a reference to help you start using your LCD TV quickly. Please refer to the User's Manual for more detailed installation and safety instructions.

Front View

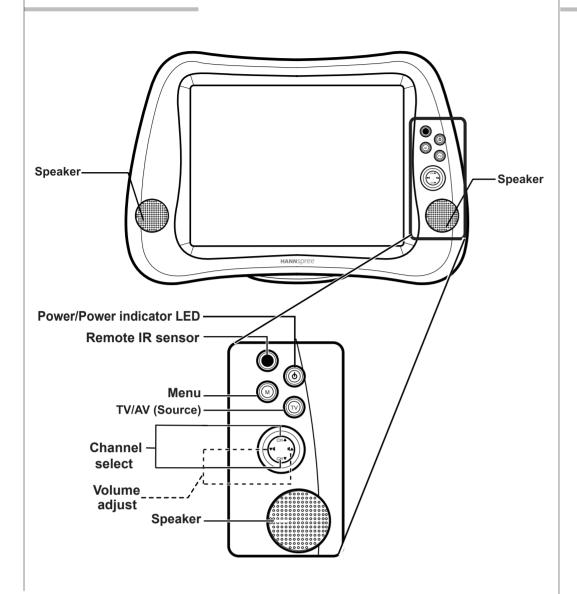


Rear View

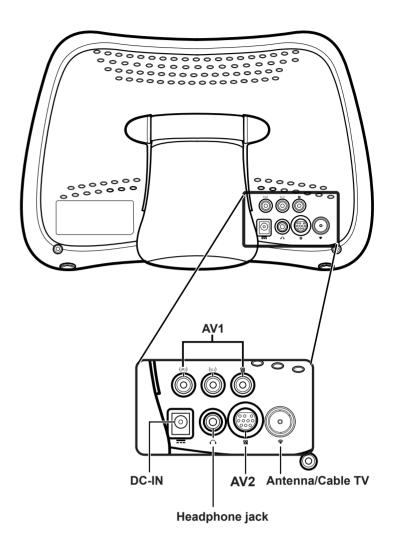


Making Connections

Connecting to Antenna/Cable TV

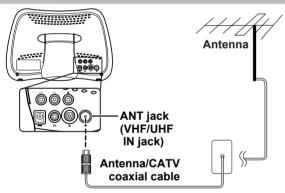


- Connect one end of the VHF/UHF (Antenna) or CATV cable to ANT Jack (VHF/UHF IN Jack) on the back of the TV.
- 2. Connect the other end of the VHF/UHF (Antenna) or CATV cable to the Antenna or CATV socket.

Connecting to a VCR, VCD, DVD Player, or Video Game Console

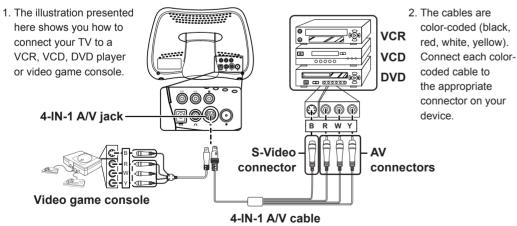

Connecting the Power Adapter

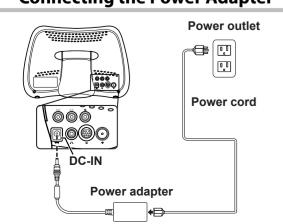

- 1. Connect the power cord to the power adapter as illustrated.
- 2. Plug the power adapter connector into the DC-IN input jack on the rear panel
- 3. Insert the three-pronged plug at the other end of the power cord into a power outlet

Note


Images are for illustration only and may vary by model or region.


A/V and Channel Setup

Selecting A/V Sources

- 1. Make sure your TV is turned on and a device such as a DVD player is connected.
- 2. Press the SOURCE button on the control panel to select different source signals. TV channel number, AV1, AV2 or AV2s appear on the screen.

Note: AV2s only appears on the screen when S-Video is connected



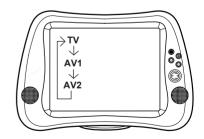

Auto Channel Setup

Please follow the instructions by using the control panel.

- 1. Press the **MENU** button to enter the OSD menu.
- 2. Use the CH▼ button to select "TV".
- 3. Press the **VOL** ▲ button to enter the TV setting.
- 4. Press the CH ▼ button until the "Auto Program" feature is selected.
- Press the VOL ▲ button to begin "Auto Program".
- 6. Your television will begin automatically memorizing the available channels.

Auto Program

